




# BEKO

## Programme Chart and Quick Reference Guide

Before starting, it is essential that you carefully read right through the Installation & Operation Instruction booklet before plugging in to the mains socket.

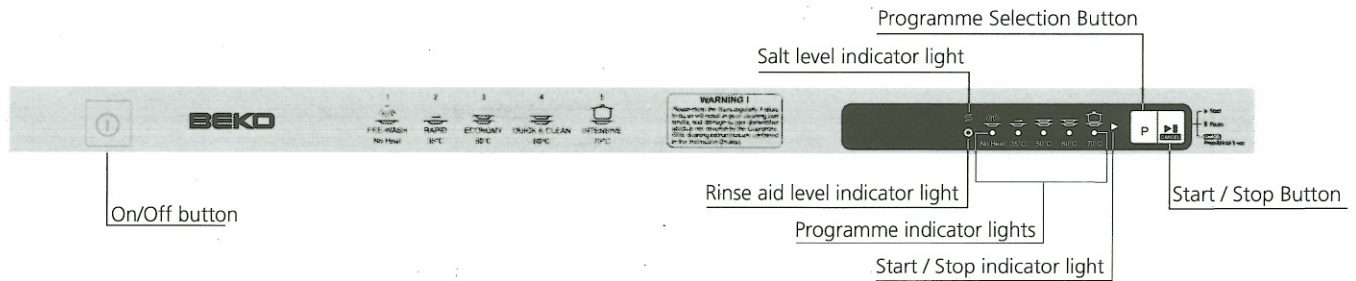

	1	2	3	4	5
<b>Programme symbols and temperatures</b>	 PRE-WASH No Heat	 RAPID 35°C	 ECONOMY 50°C	 QUICK & CLEAN 60°C	 INTENSIVE 70°C
<b>Programme selection</b>	Pre-wash to rinse and loosen residue - awaiting full load - then select a Programme	Lightly soiled dishes 30 minute programme	Most economic programme for normally soiled dishes	Soiled dishes	Heavily soiled dishes requiring Hot pre-wash
<b>Detergent compartment</b> A=25 cm <sup>3</sup> / 15 cm <sup>3</sup> B=5 cm <sup>3</sup>	-	A	A+B	A+B	A+B
<b>Programme sequence</b>	Prewash ▼ End	Wash ▼ Cold rinse ▼ Hot rinse ▼ End	Prewash ▼ Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	Prewash ▼ Wash ▼ Cold rinse ▼ Rinse ▼ Hot rinse ▼ Drying
<b>Consumption figures</b> * Water (Litres) Energy (kWh) Duration (min)	4,2 - 14	11,8 0,78 30	15 1,05 136	11,8 1,3 58	17,5 1,65 115

\* Values declared on the product or in the operating instruction booklet / programme chart and quick reference card supplied with the product are obtained in tests performed under controlled laboratory conditions and these tests are as defined in relevant standards. These figures may vary depending on how soiled the dishes are, the water hardness level and other factors. Temperature changes exceeding 15°C may also effect these figures.

\*\* Reference programme for the Testing Institute and energy labelling. Testing program: Eco 50°C as compliant to EN 50242 international norms.

\*\*\* Due to continual improvement through research & design, specifications and design may change without prior notice.



## Operating the dishwasher

- Push in the on/off button and check that the programme indicator lights come on.
- Check the salt and rinse aid level indicator lights before you start the machine. If necessary add salt and rinse aid.
- Select the required programme by referring to the programme chart.
- Select the desired programme by using the Programme Selection Button.
- Press start / stop button.
- Close the door then programme starts.
- An audio signal with an interval of 10 seconds warns you to switch your machine off when the selected washing program ends. This audio signal warns you for a duration of 1 minutes and then turns off.

! Do not open the dishwasher door whilst the appliance is in operation. However, in case the door is opened while the machine is working, then a safety mechanism ensures the machine immediately stops. Water may be very hot, so be careful.

- Care must be taken if opening the door, as steam and water will escape.
- Press the on/off button after the programme is completed. The indicator lights will go off.
- Unload the baskets - we recommend to turn off the water tap when not in use.

## How to cancel the washing programme

To cancel a programme while the machine is operating:

- Open the door.

**! Care must be taken when opening the door, as steam will escape.**

- Press and hold start/stop button for 3 seconds. The start / stop indicator light will start flashing. Close the door. The machine will drain the water inside the machine for 45 seconds.
- The programme is cancelled when start/stop indicator light goes off. Then, you can choose and start a new programme.

! Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.

## How to change the washing programme

To change the programme selection while the machine is operating:

- Open the door.

**! Care must be taken when opening the door, as steam will escape.**

- Press start/stop button. The indicator light will go off.
- Select the new programme. Press start/stop button. The indicator light will be on and new programme will start.

! The new programme will NOT start right from the beginning. It will start from the stage last carried out by the previous programme selection.

**BEKO**