


(continued from previous page)

- iv) • Position mantel, ensuring the wedging action of the rail pulls it tight to the wall.
- Fine-adjust the rail-height if necessary..
- v) **READ THIS INSTRUCTION ONLY IF YOUR MANTEL IS TO BE CONVERTED TO 57mm (2 1/4") Rebate.**

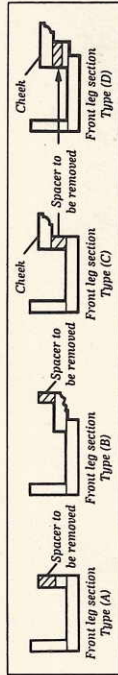

- Types (A) and (B) : Remove vertical spacers and corresponding horizontal spacer.
- Types (C) and (D) : Removal of vertical spacers will require removal and refitting of cheek pieces and backbeam.

MAINTENANCE:

- i) **MARBLE/AGGLOMERATE** : Marble is a naturally produced material and does exhibit differences in colour, texture and veining, making your Suncrest Fireplace unique. Open veining is not a fault, it is a natural part of the marble formation and adds to the character of the material.
CARE : Wipe gently with a damp cloth. An occasional application of wax furniture polish will help seal the gloss surface finish. Any dulling of finish can be revitalised by a gentle buffing with wax polish. Take care not to scratch the surface and avoid contact with acidic solutions (fruit juice, wine etc.).
- ii) **MANTEL/SURROUND** : Suncrest products are manufactured from natural materials - solid woods and hardwood veneered M.D.F. panels wherever possible. Natural materials do exhibit differences in colour, texture and grain. Light timbers will also mellow and darken naturally in sunlight. The finish is not resistant to very hot items, or those substances likely to stain. Suncrest only use environmentally sensitive timbers, purchased from sustainable sources.
CARE : Solid Wood - Dust with a soft dry cloth. Polish with beeswax. Avoid silicone-based spray polishes. White M.D.F. - Clean with a damp cloth or non-abrasive domestic cleanser.
- iii) **TILES** : Suncrest tiled sets use only quality tiles, manufactured to BS 6431. This determines an acceptable variation in colour, size and finish.
CARE : Remove all surface dust before cleaning with a lightly damp cloth. This will prevent soiling of the grouting. The tiles may be polished with a sparing application of domestic spray polish and a clean, soft, dry cloth.
- iv) **METAL WORK** : Certain Suncrest surrounds have metal backpanels and hearths which have a powder coated finish and all brasswork has a lacquered coating which inhibits tarnishing. Care should be taken to avoid surface scratching.
CARE : Clean occasionally with a soft, non-abrasive, lightly damp cloth.

ANY MATERIALS USED MEET THE RELEVANT BRITISH STANDARDS WHEREVER POSSIBLE.

ALL SUNCREST PRODUCTS ARE GUARANTEED FOR ONE YEAR FROM THE DATE OF PURCHASE AGAINST GENUINE MANUFACTURING DEFECT. IF YOU ENCOUNTER SUCH A PROBLEM, PLEASE CONTACT YOUR DEALER.

SUNCREST SURROUNDS LTD

Swan Road, South West Industrial Estate, Peterlee, Co. Durham SR8 2HS
Telephone: Wearside 0191 5865241 Fax: 0191 5180552

L 95 01 A

SUNCREST

The Finest Fire Surrounds

INSTRUCTIONS

• INSTALLATION:

Hearths

Backpanels

Surrounds

Mantels

• MAINTENANCE

PLEASE READ CAREFULLY

This leaflet is intended to provide relevant and helpful information for general installation and maintenance procedures. However, since many of the factors relating to installation are beyond our control, no responsibility or liability can be accepted by Suncrest Surrounds Ltd.

INSTALLATION:

Hearths Backpanels



For Solid Marble, Agglomerate Marble, Suncrest Tiled Sets

A PREPARATION

- i) **CHIMNEY**
 - Check that the proposed fire is suitable for your chimney and proposed fire surround.
 - Ensure your chimney is swept and free from obstruction.
 - Conduct smoke test to ensure a good flow of air. If the smoke does not show a good pull seek expert advice.
- ii) **FIREPLACE**
 - Any existing hearth or surround must be removed.
 - Fire opening may have to be modified to suit new fire (check with fire manufacturers instructions for information).
 - Make good any plasterwork, for a smooth surface finish. Allow to dry.
 - Modify skirting board to ensure the hearth fits flush to the wall.

B FITTING

- i) **HEARTH**
 - Bed hearth onto a stiff mix of sand/cement.
 - Ensure hearth is level, centred and flush to the wall.
 - Allow to set.
- ii) **BACKPANEL**
 - Fix backpanel to the wall. We recommend a light-coloured tile-adhesive. If cement or plaster is to be used, the rear face of the backpanel should first be coated with "Liquid Unibond" or an equivalent P.V.A. Sealant.
 - Ensure the backpanel fits snugly with the mantel rebate.
 - Any drilling, if required, should be undertaken by a competent person, with necessary care.

C SEALING

- i) Make a **GAS-TIGHT** seal between the wall and backpanel fire opening using a heat-resistant mastic, non-setting fire cement or equivalent. Smoke test to check seal.

D FIRE INSTALLATION

- i) All gas installations should be done by a C.O.R.G.I. registered installer, and in accordance with BS 5871 and relevant building regulations.
- ii) For solid-fuel installations, refer to Solid Fuel Advisory Service. (Ref. BS 1251).

INSTALLATION:

Surrounds



For Surrounds i.e. integrated mantel/hearth/backpanel combinations

A COMPATIBILITY

- i) For compatibility of this surround with gas fires, consult your dealer.

B PREPARATION

- i) Refer to "Hearths/Backpanels" / PREPARATION, paragraph i) and ii).

C FITTING

- i) Surround must be fitted by two persons and lifted into position from the bottom.
- ii) Remove transit rail.
- iii) Refer to "Mantels" / FITTING, paragraph v) for the correct fixing procedure.

D SEALING

- i) Refer to "Hearths/Backpanels" / SEALING, paragraph i).

E FIRE INSTALLATION

- i) Refer to "Hearths/Backpanels" / FIRE INSTALLATION, paragraph i).

INSTALLATION:

Mantels



SUNCREST mantels are supplied ready assembled for use with a backpanel in their 22mm rebate form. Certain models can be adapted for use with solid-fuel by converting to a 57mm (2½") rebate.

A COMPATIBILITY


- i) For compatibility of this mantel with gas fires, consult your dealer.

B FITTING

- i) Unscrew the wedge section "TRANSIT RAIL" from across the mantel legs. Retain for use as a "HANGING RAIL".

USING THE SPECIAL SUNCREST HANGING RAIL

- ii) Measure height of mantel to the underside of the top and deduct 62mm. Mark a horizontal line on wall at this height above the hearth top.
- iii) Drill and plug wall appropriately and screw the rail centrally as shown (Fig. 1).

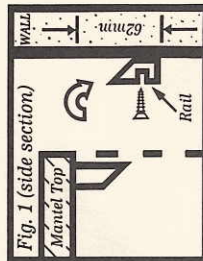

(continued overleaf)